


# INSTRUCTION MANUAL

FRAME SLIDER WITH IMPACT SHOCK ABSORBER

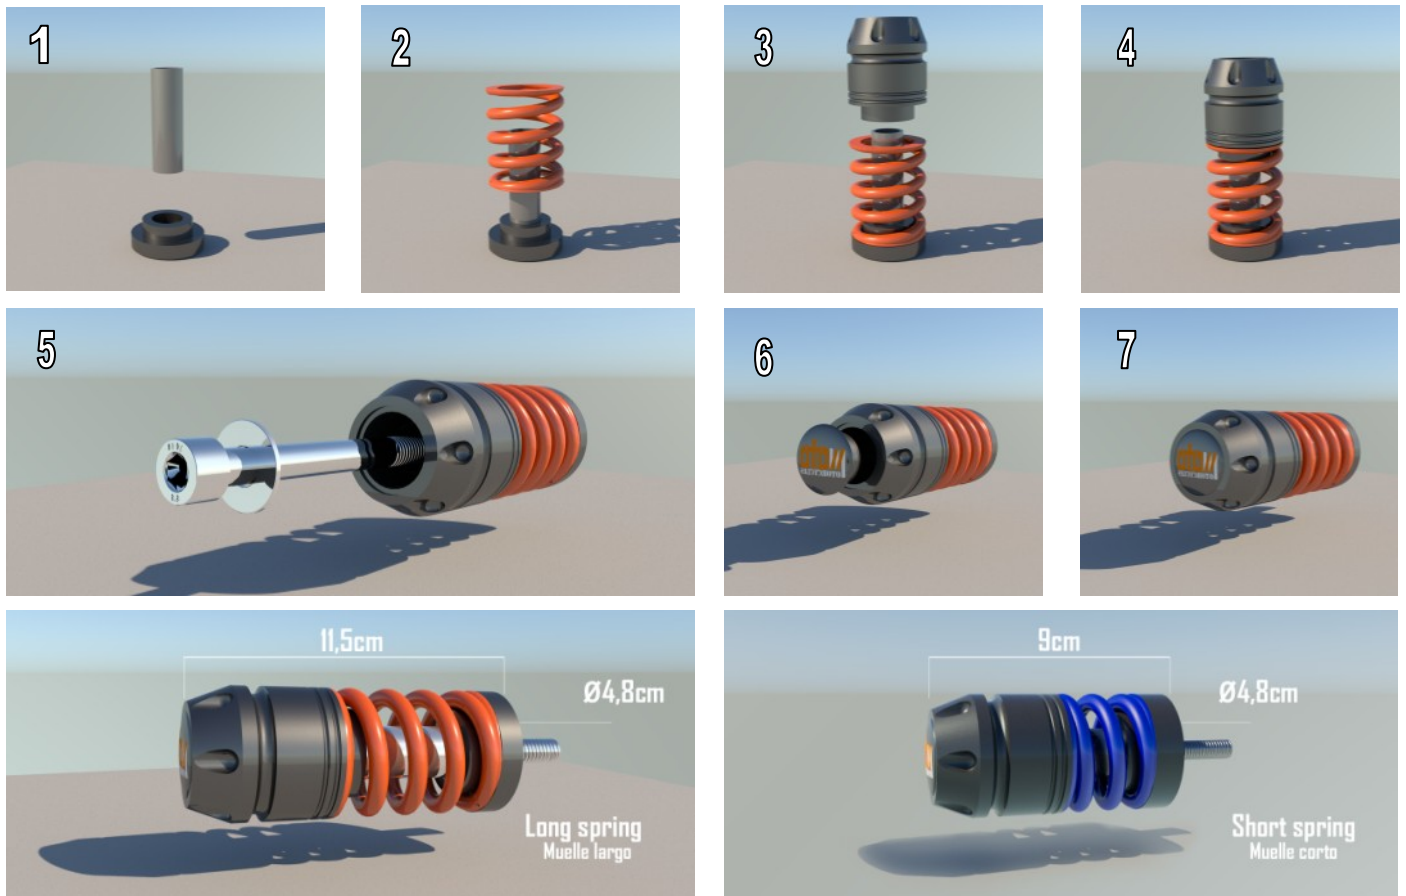

Step 5.- Tighten the screw with an Allen screwdriver to the adapter or chassis of the bike.

Step 6.- Place a pressure cap.

You can easily adapt the OTOMotorcycles Universal frame slider to the chassis, structure or sometimes even to the adapter or anchorage of your previous frame slider. If you wish you can purchase our specific adapter for your model of motorcycle, which is sold separately.



Example of adapter for Kawasaki Z800 model. Our adapters include a specific assembly manual for each model.